



INSTALLING WALL PANELS

VERTICAL WALL PANEL INSTALLATION



Showing marking out prior to installing



Marked out panel cut out for A/C vent




Panel folded returning around wall



Showing how sheet can be folded simply
Using a straight edge



Show's nail holding in place temporarily
prior to permanent fixing.

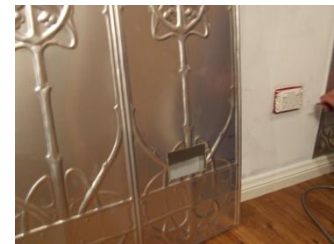

Cut out section for power points etc



Installed panel with corner & cutouts




Panels being installed as shown



Shows panel with small infill section



One way to cut infill sections out

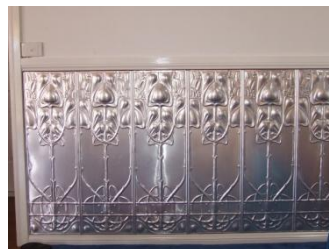

Shows completed wall. Prior to Painting



The wall complete after priming
and painting.

All items are shown as a guide only. Pressed Tin Panels do not carry any responsibility for how individual panels are installed.

If you have any questions please feel free to contact us. 02 6332 1738.

Panel shown is the **Art Nouveau**. Guide is for any Panels being fixed to Walls only.